

# Monteringsveiledning

Rev. 20131008


# Solid

## Dusjkabinett



80x80x200


90x90x200

























Firkant

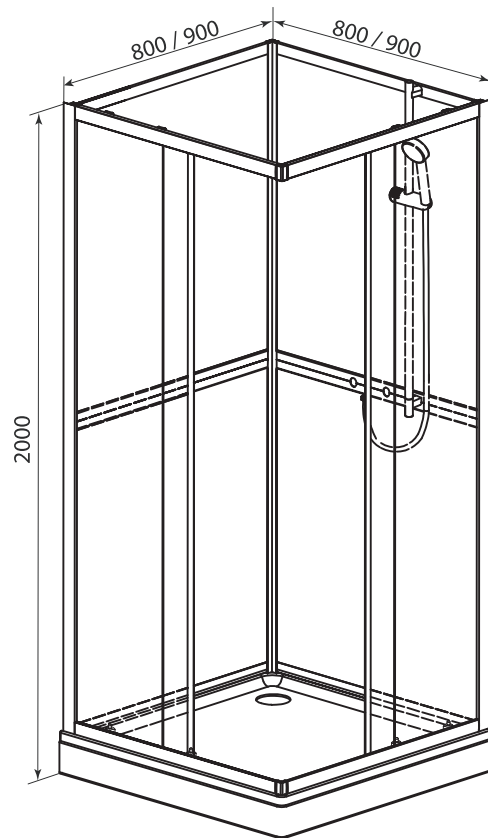



duxa bad

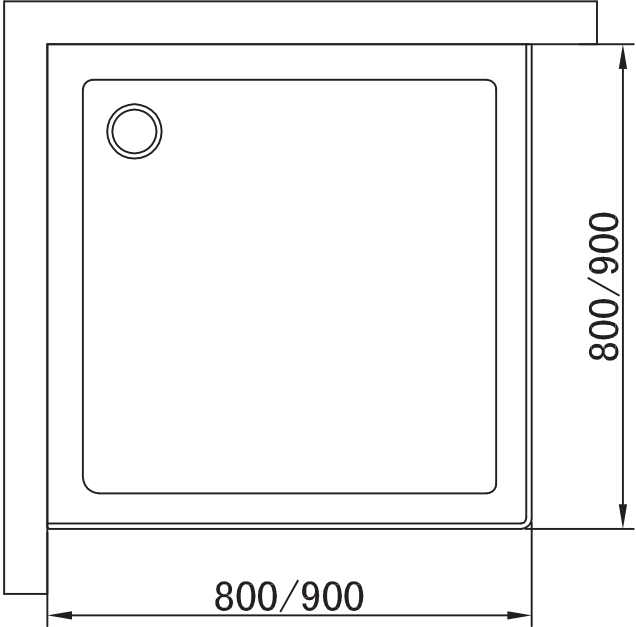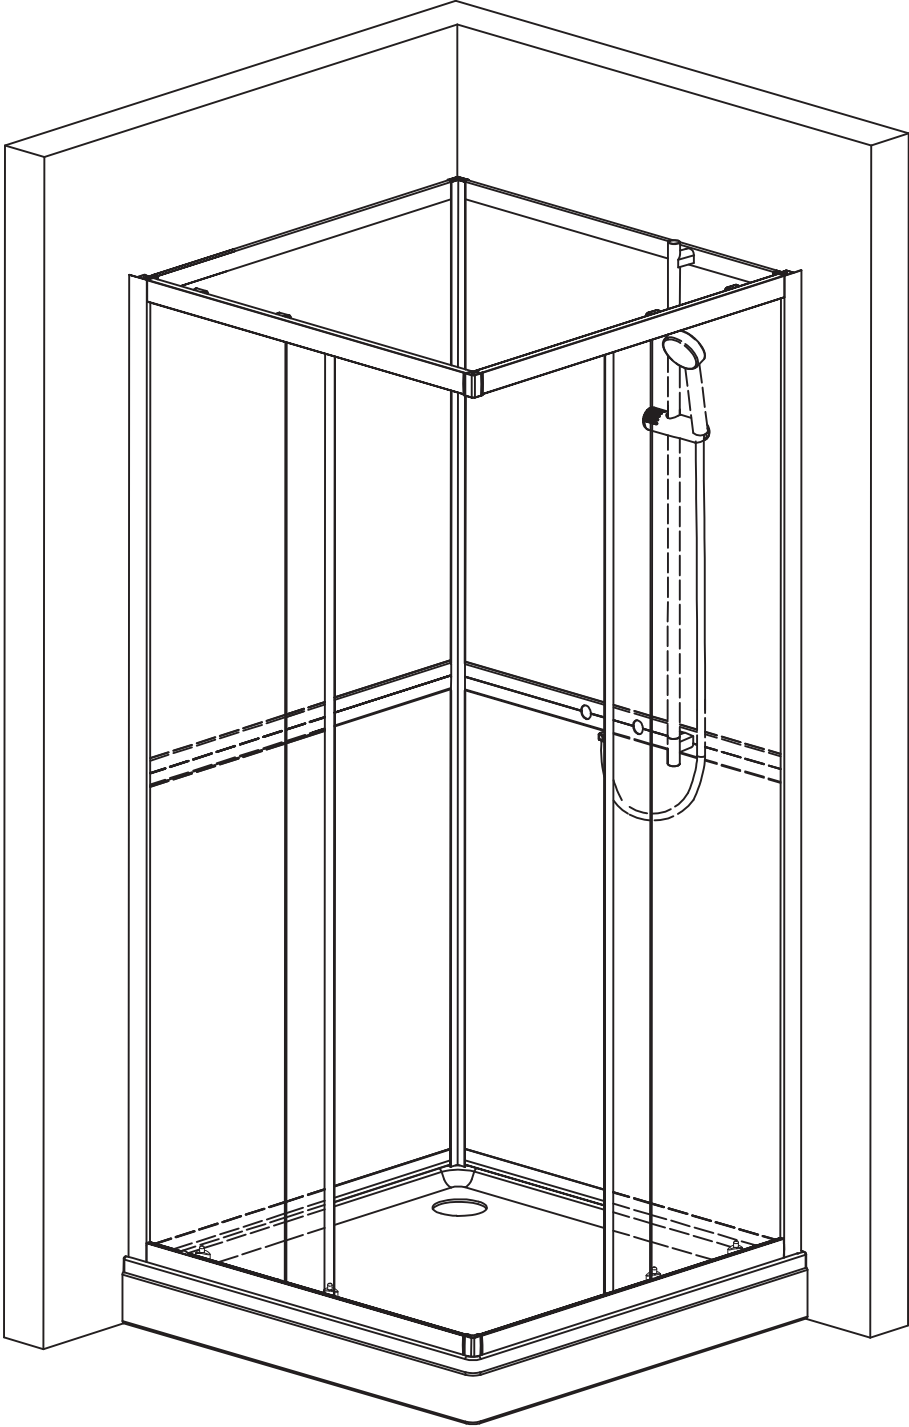


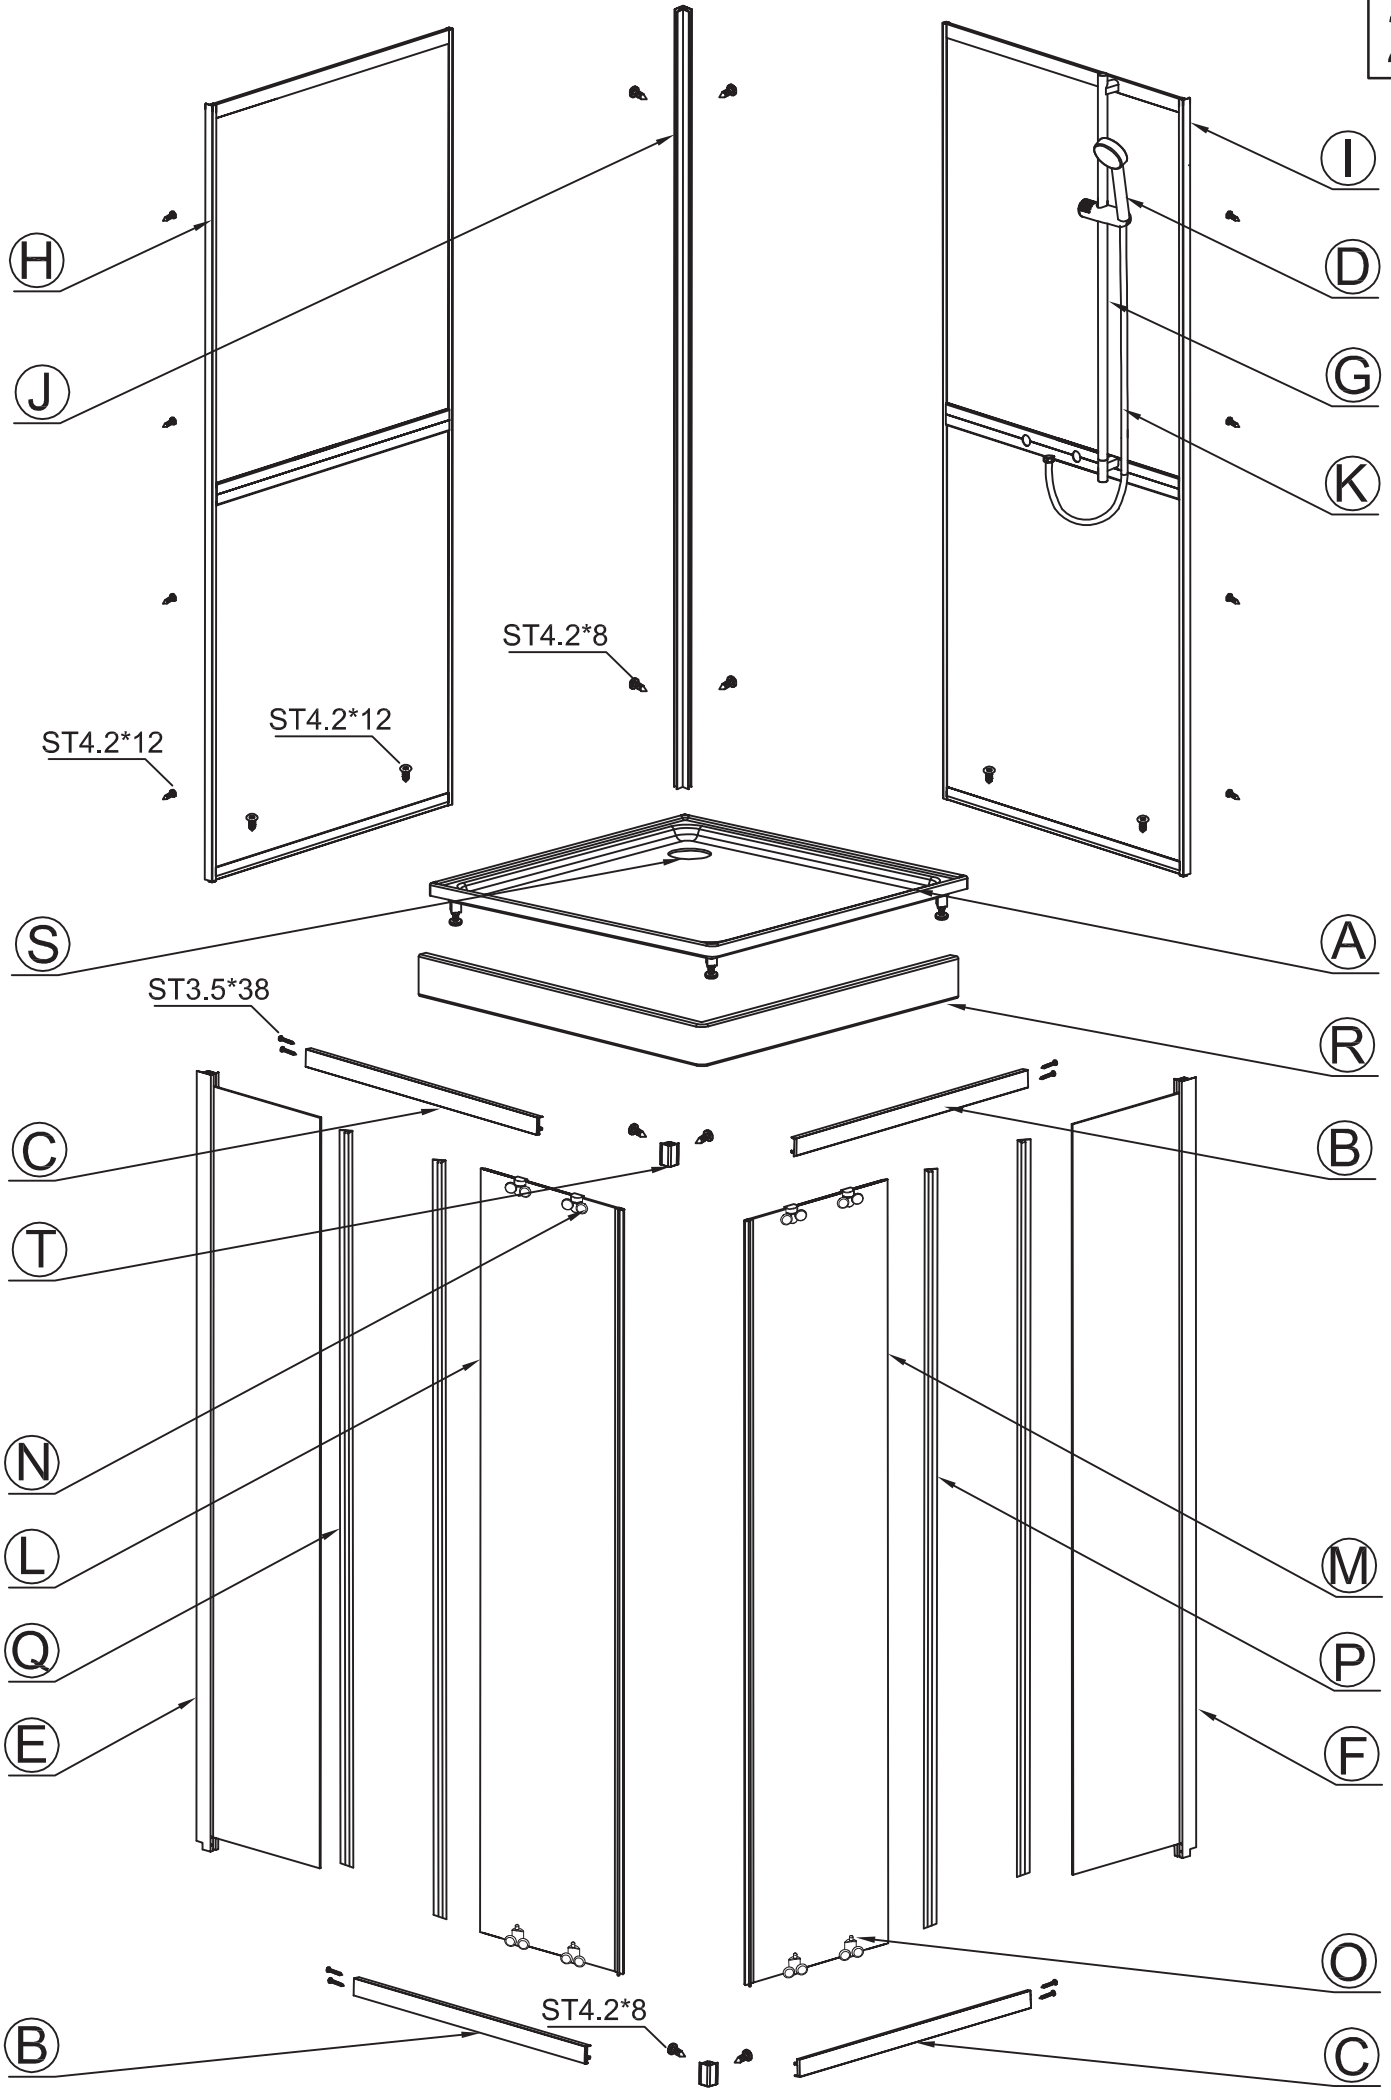

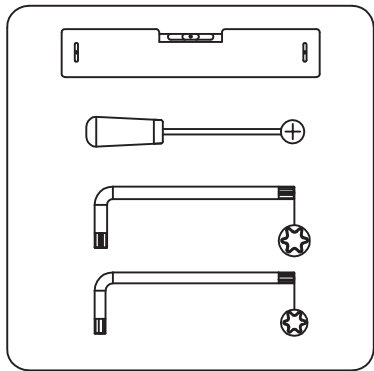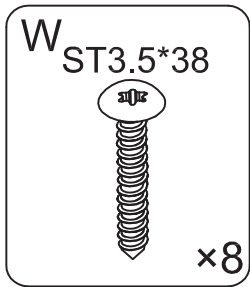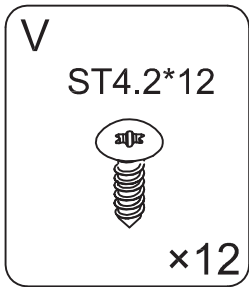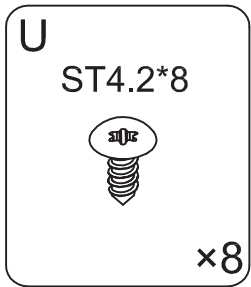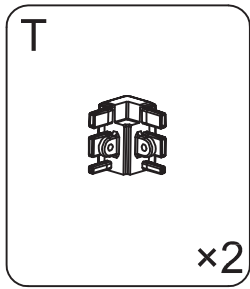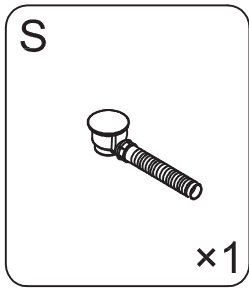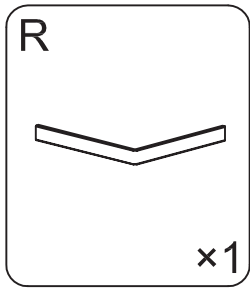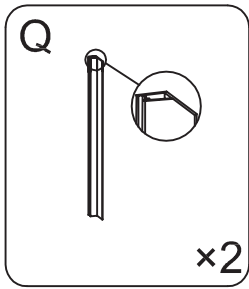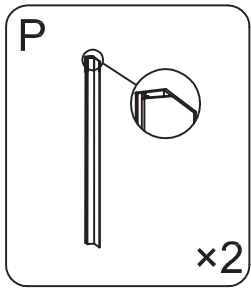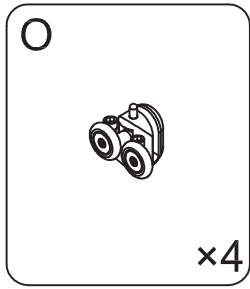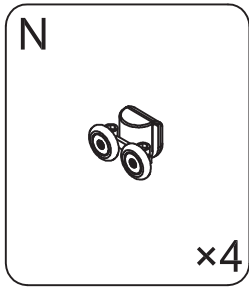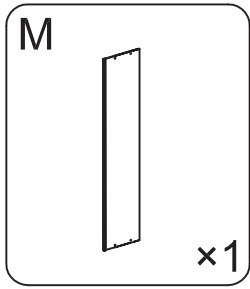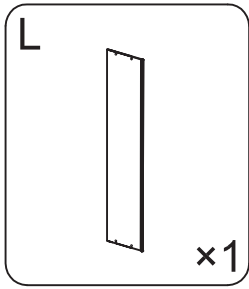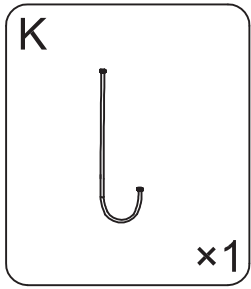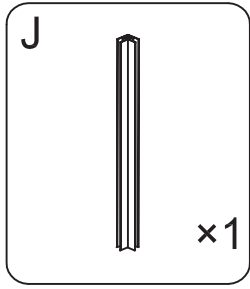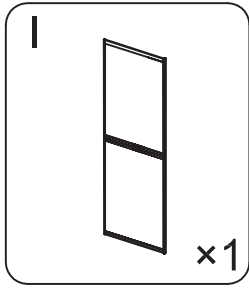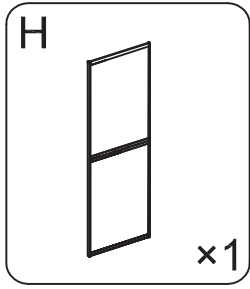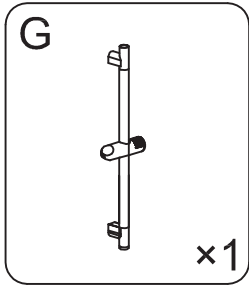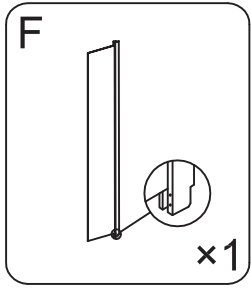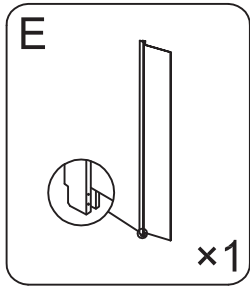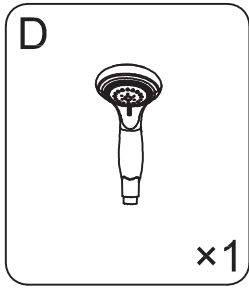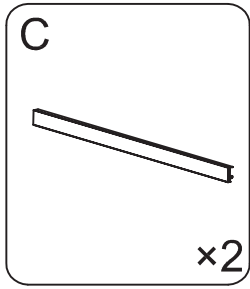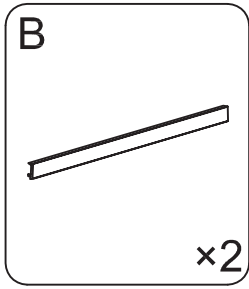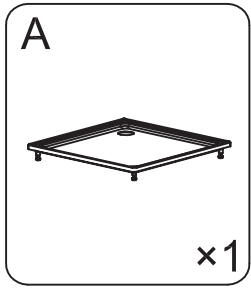


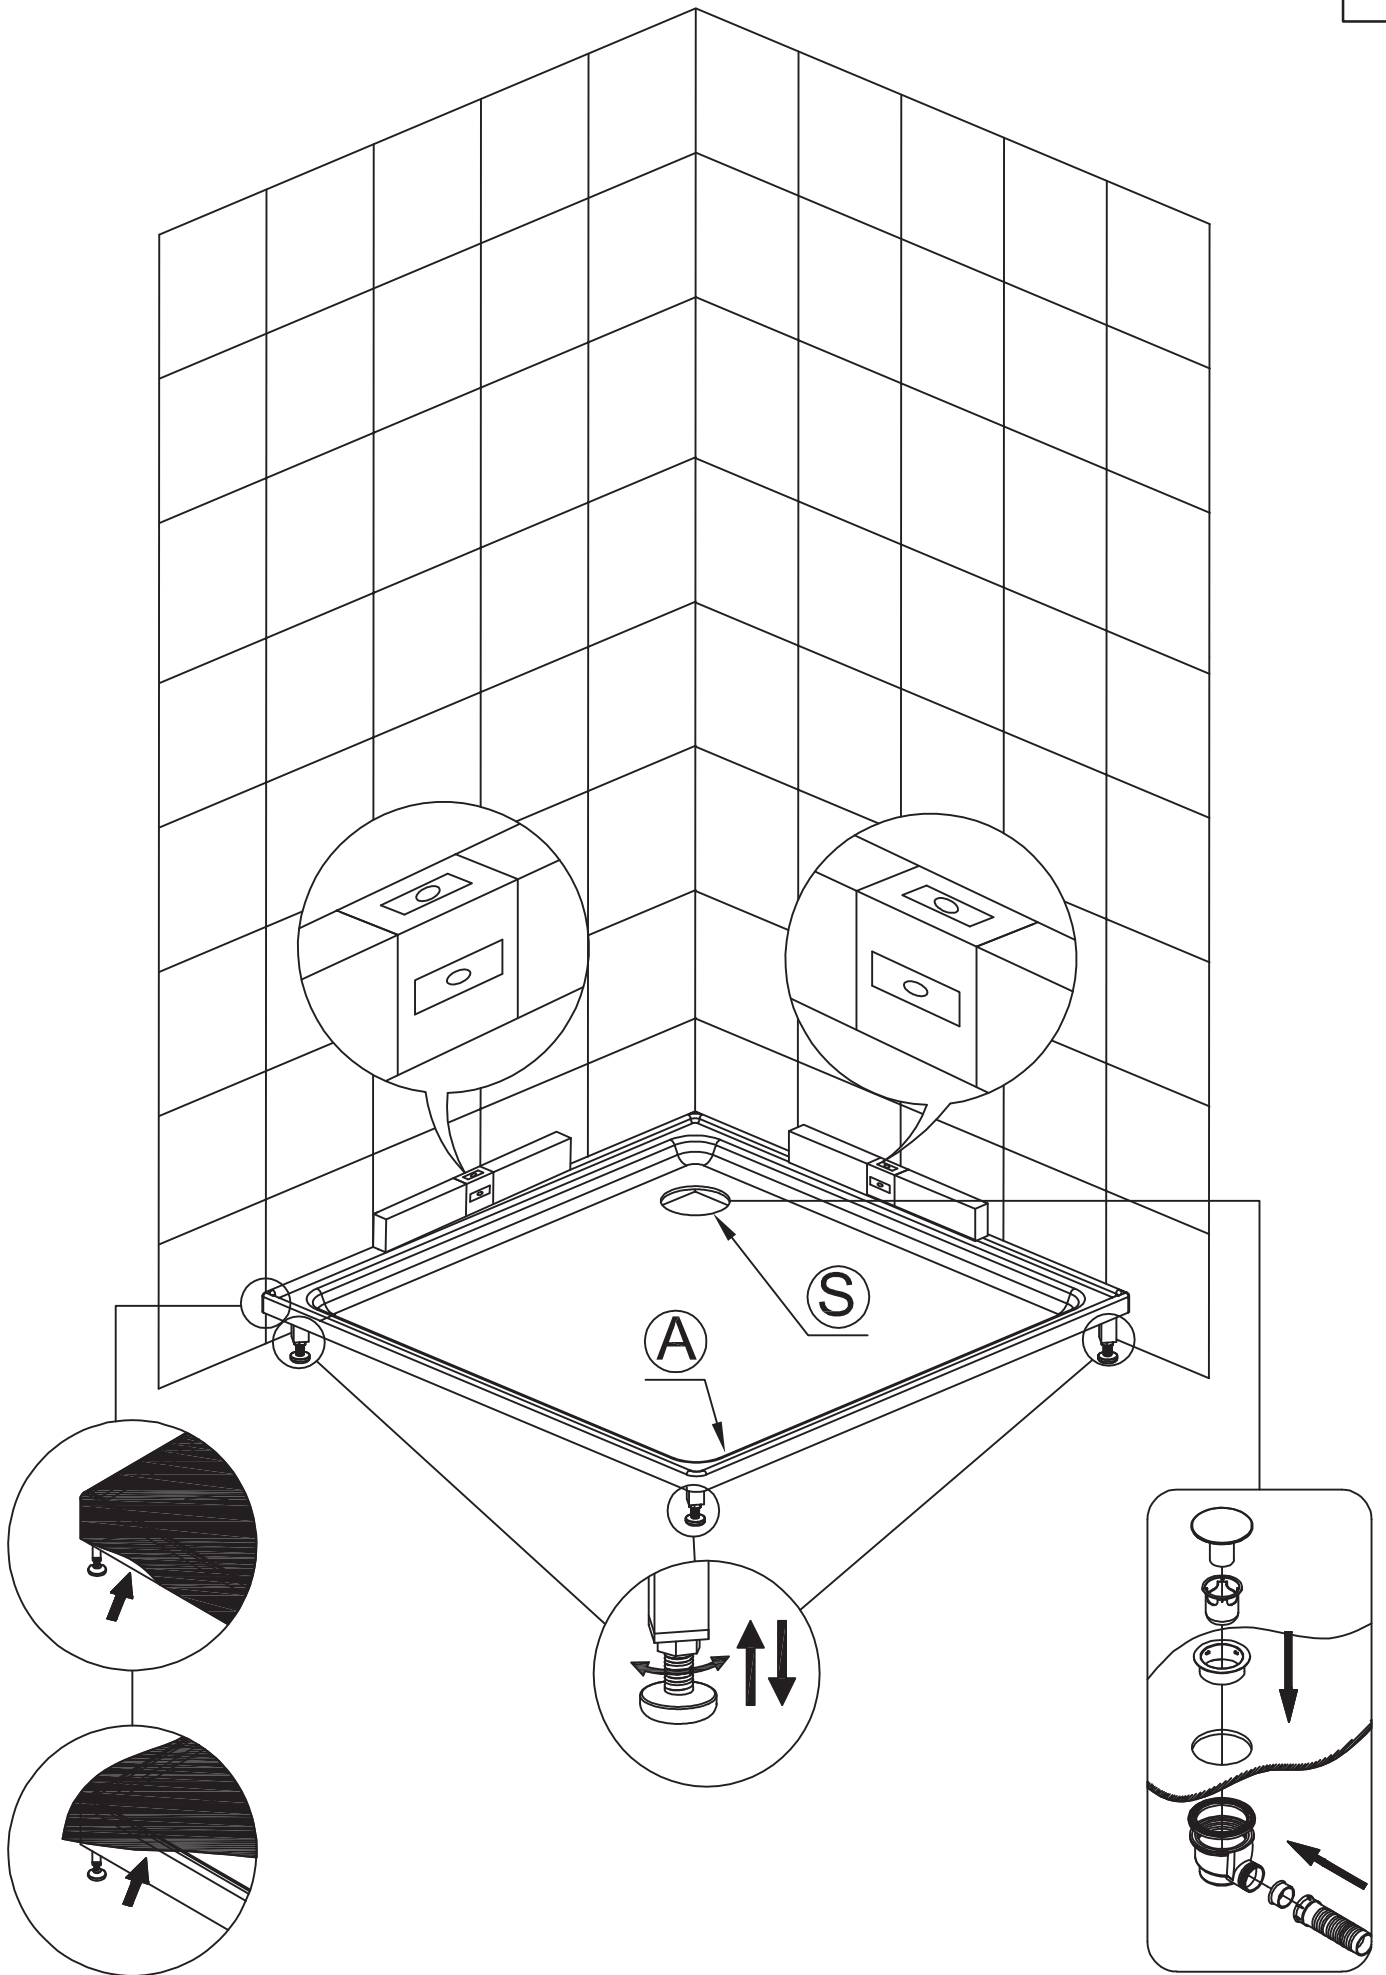

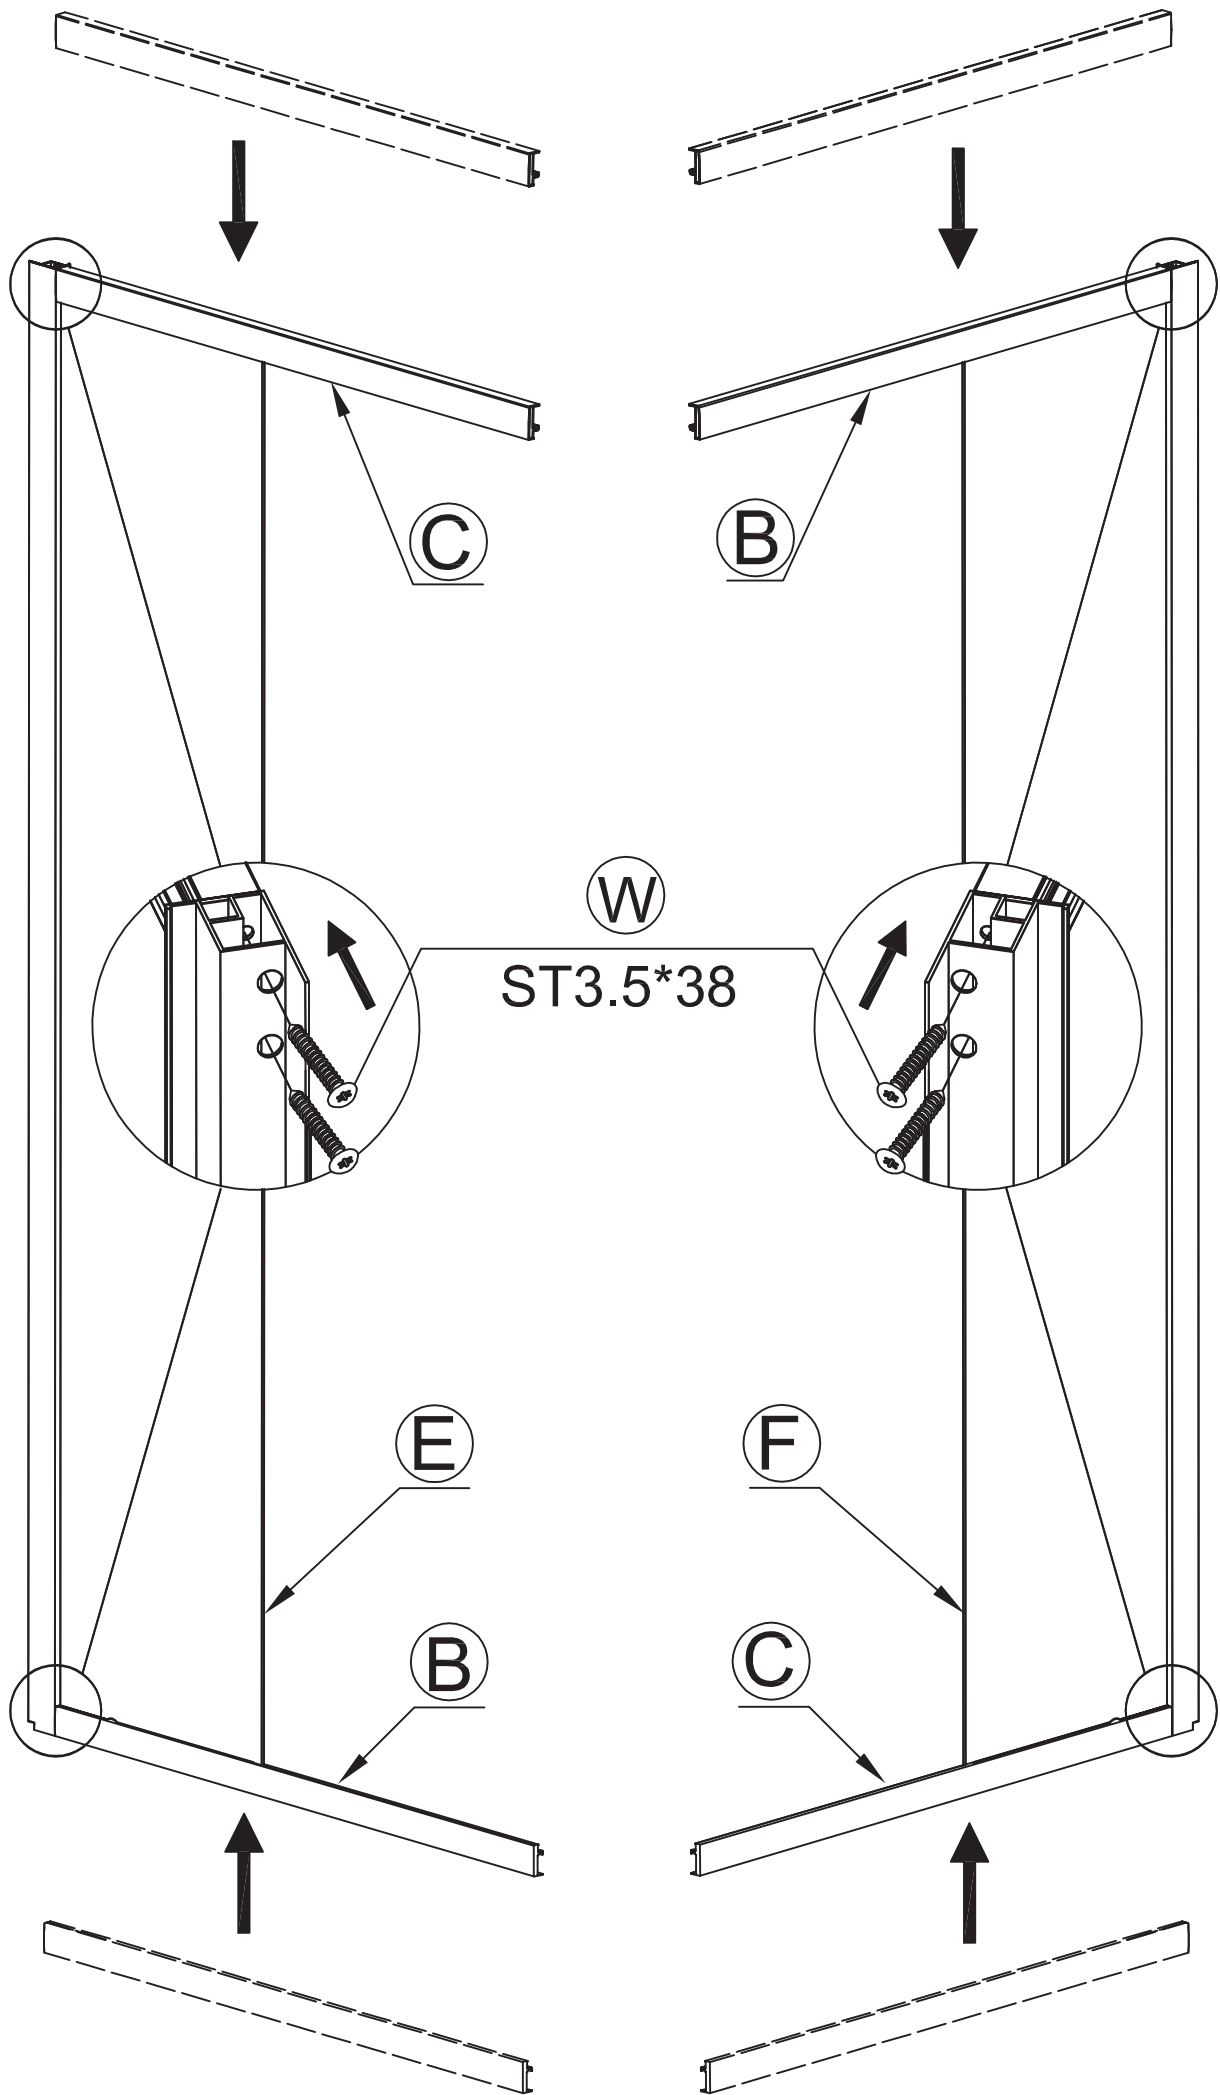


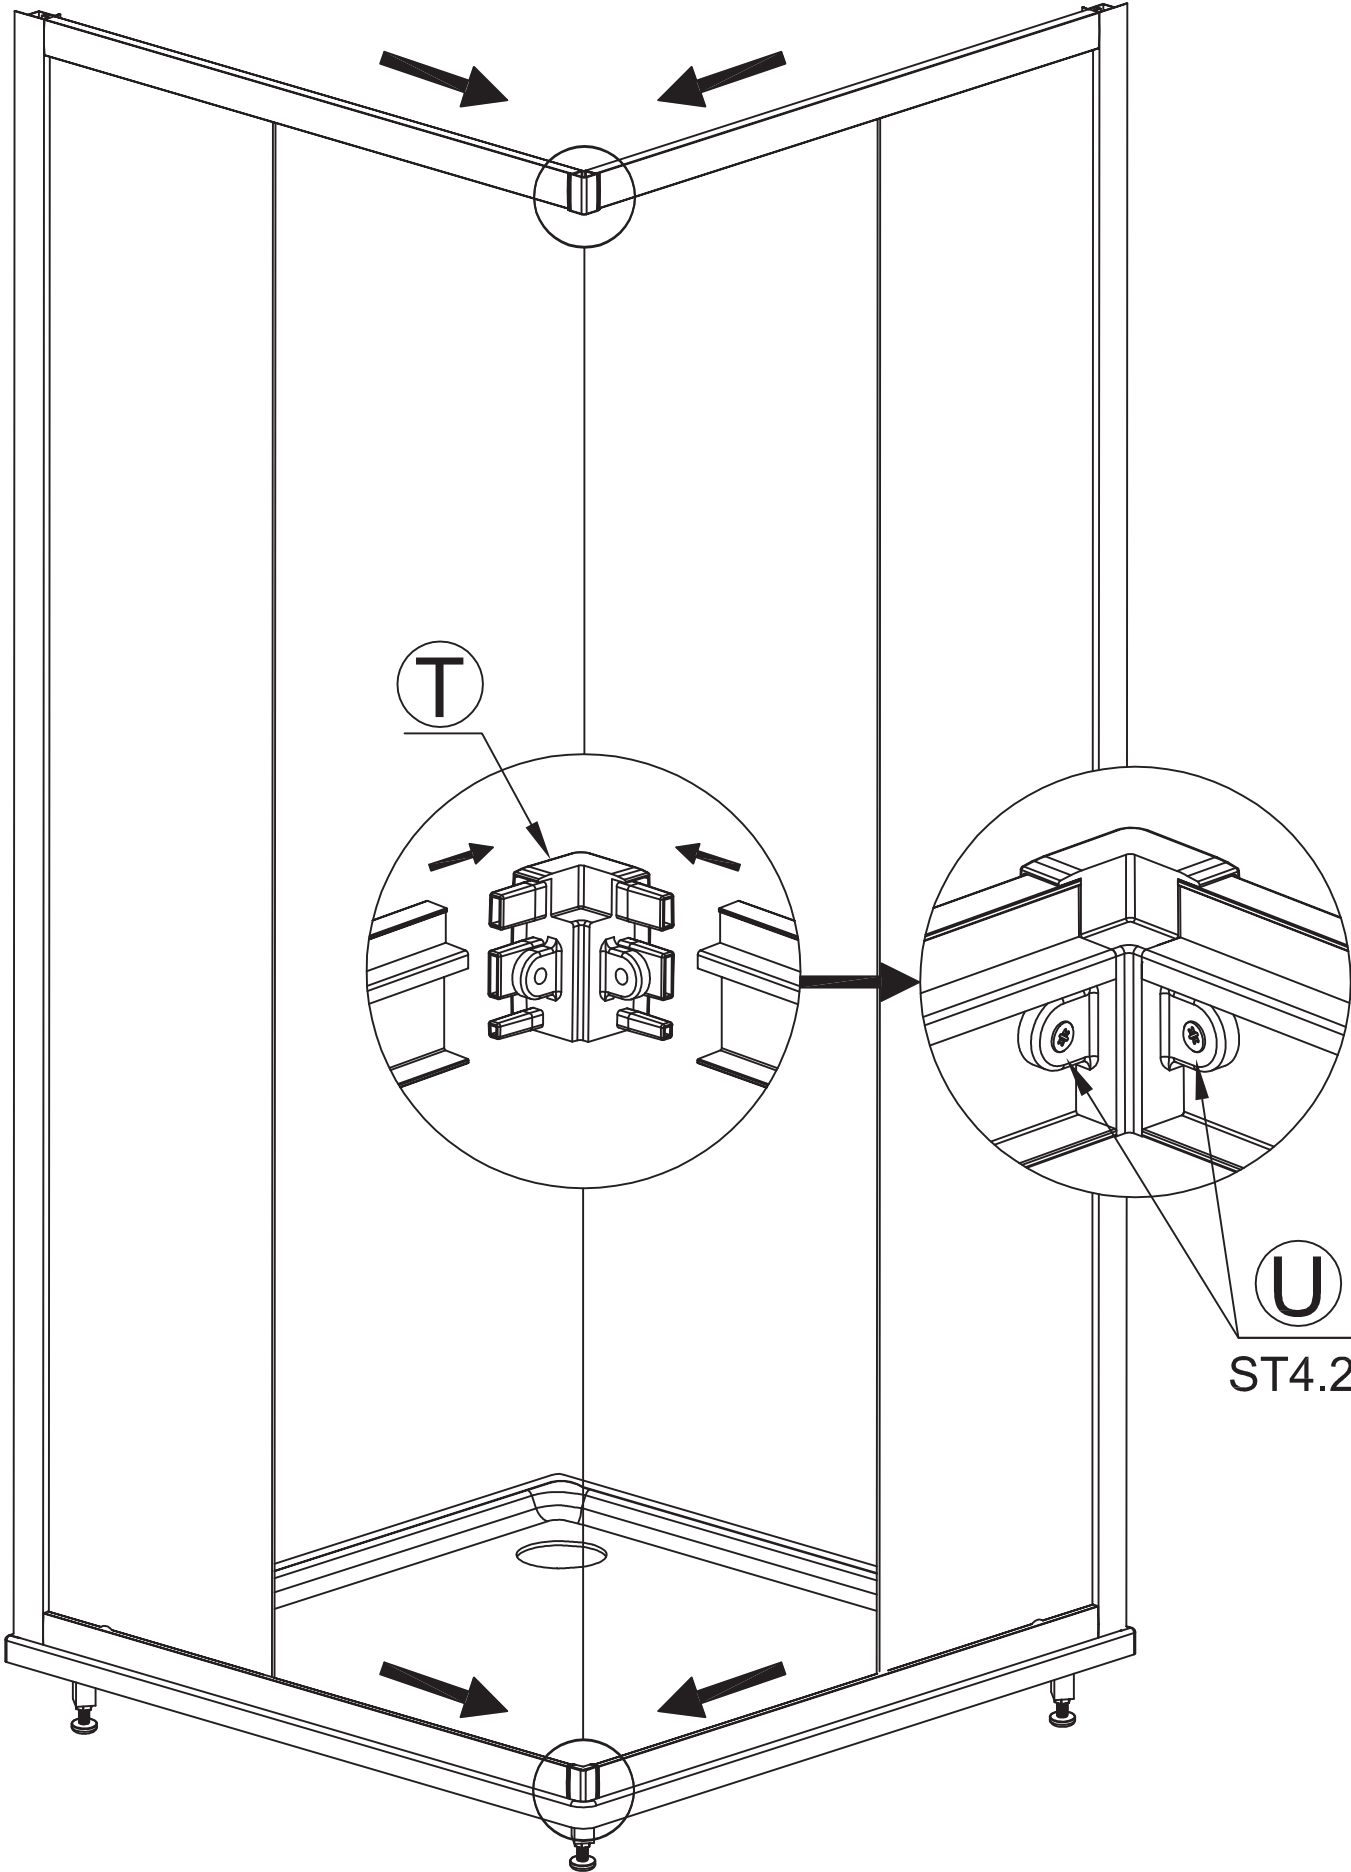



U  
ST4.2\*8

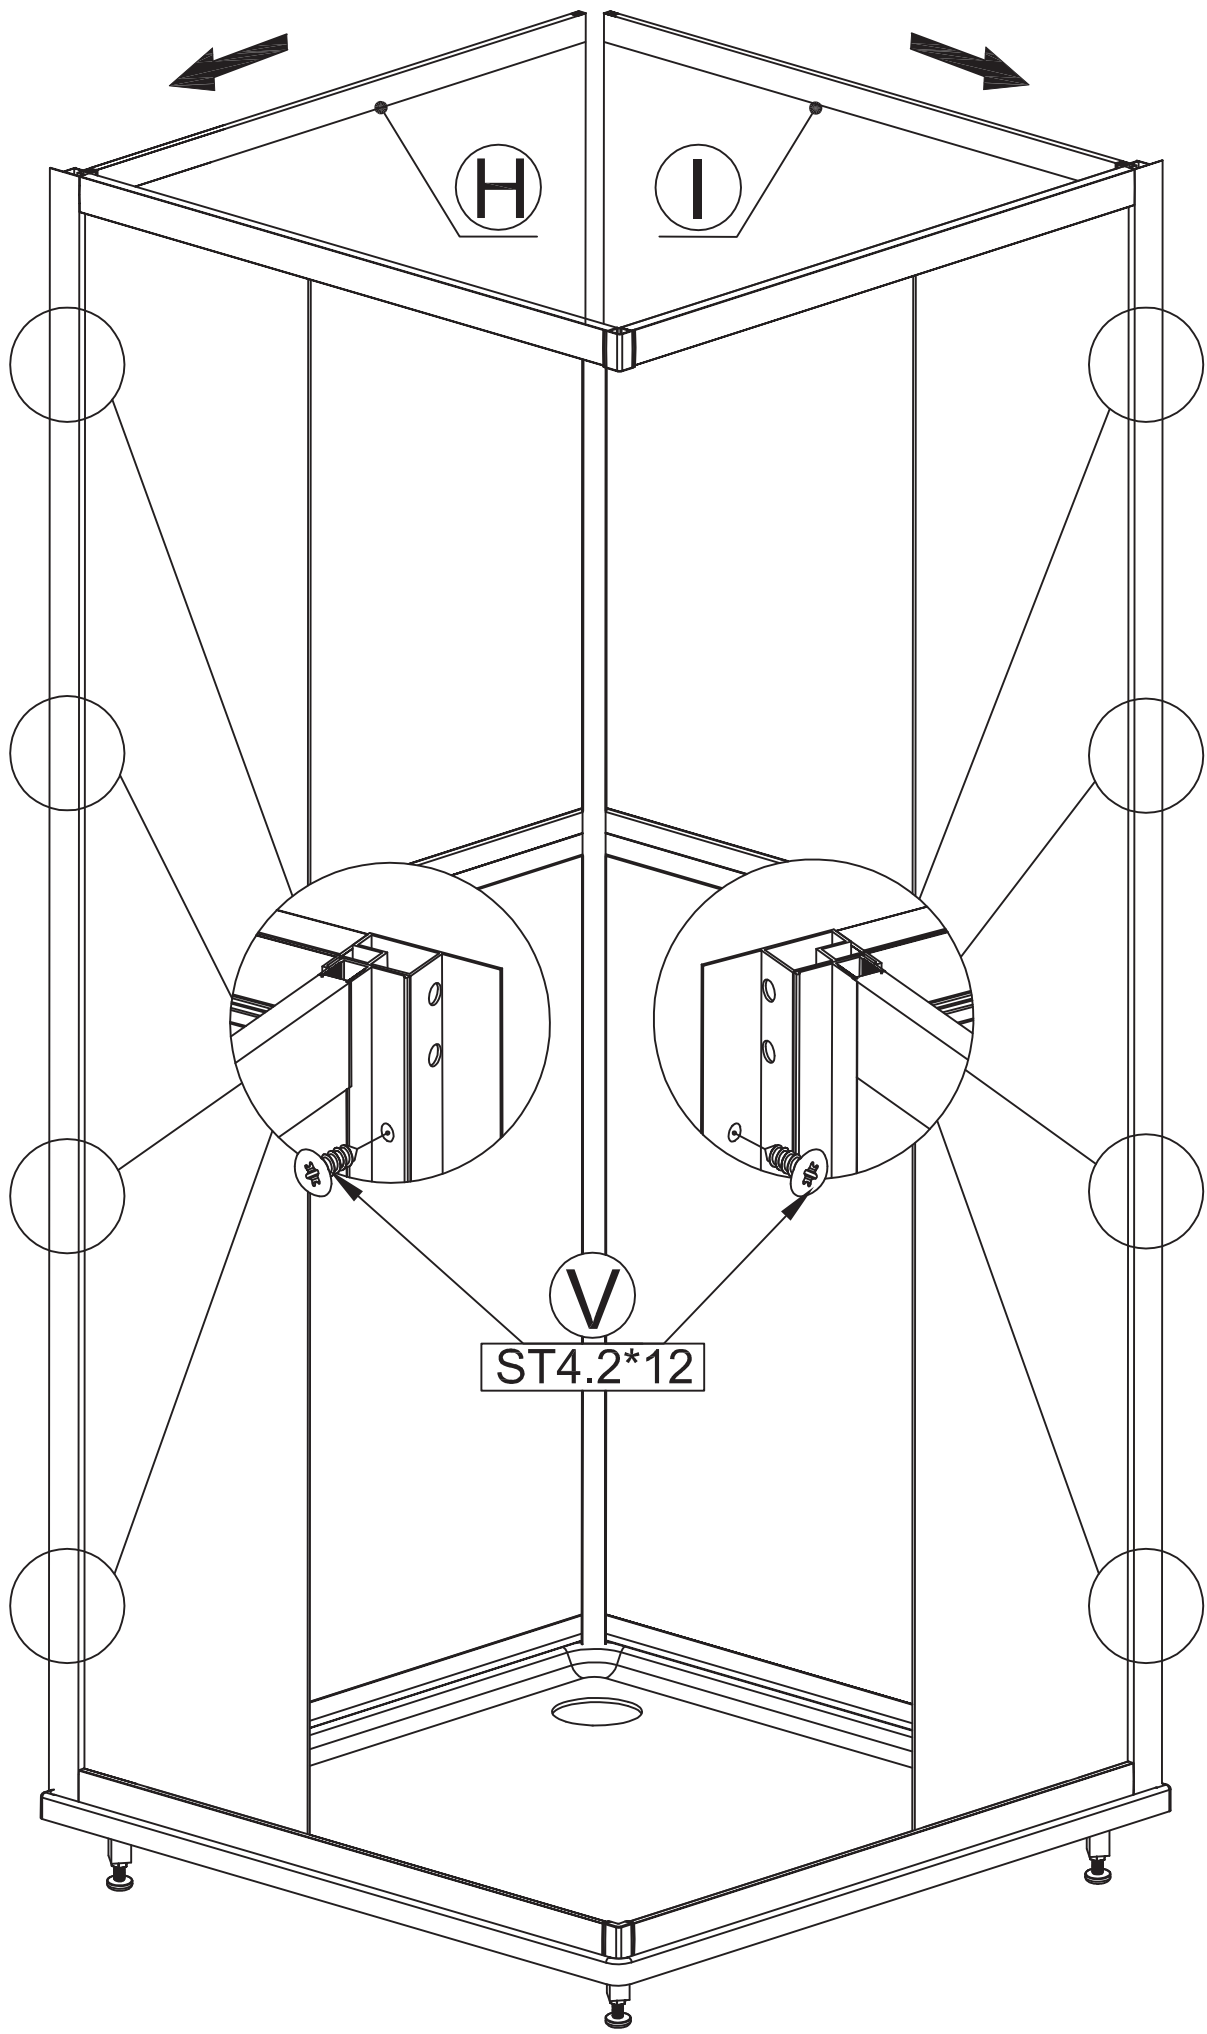




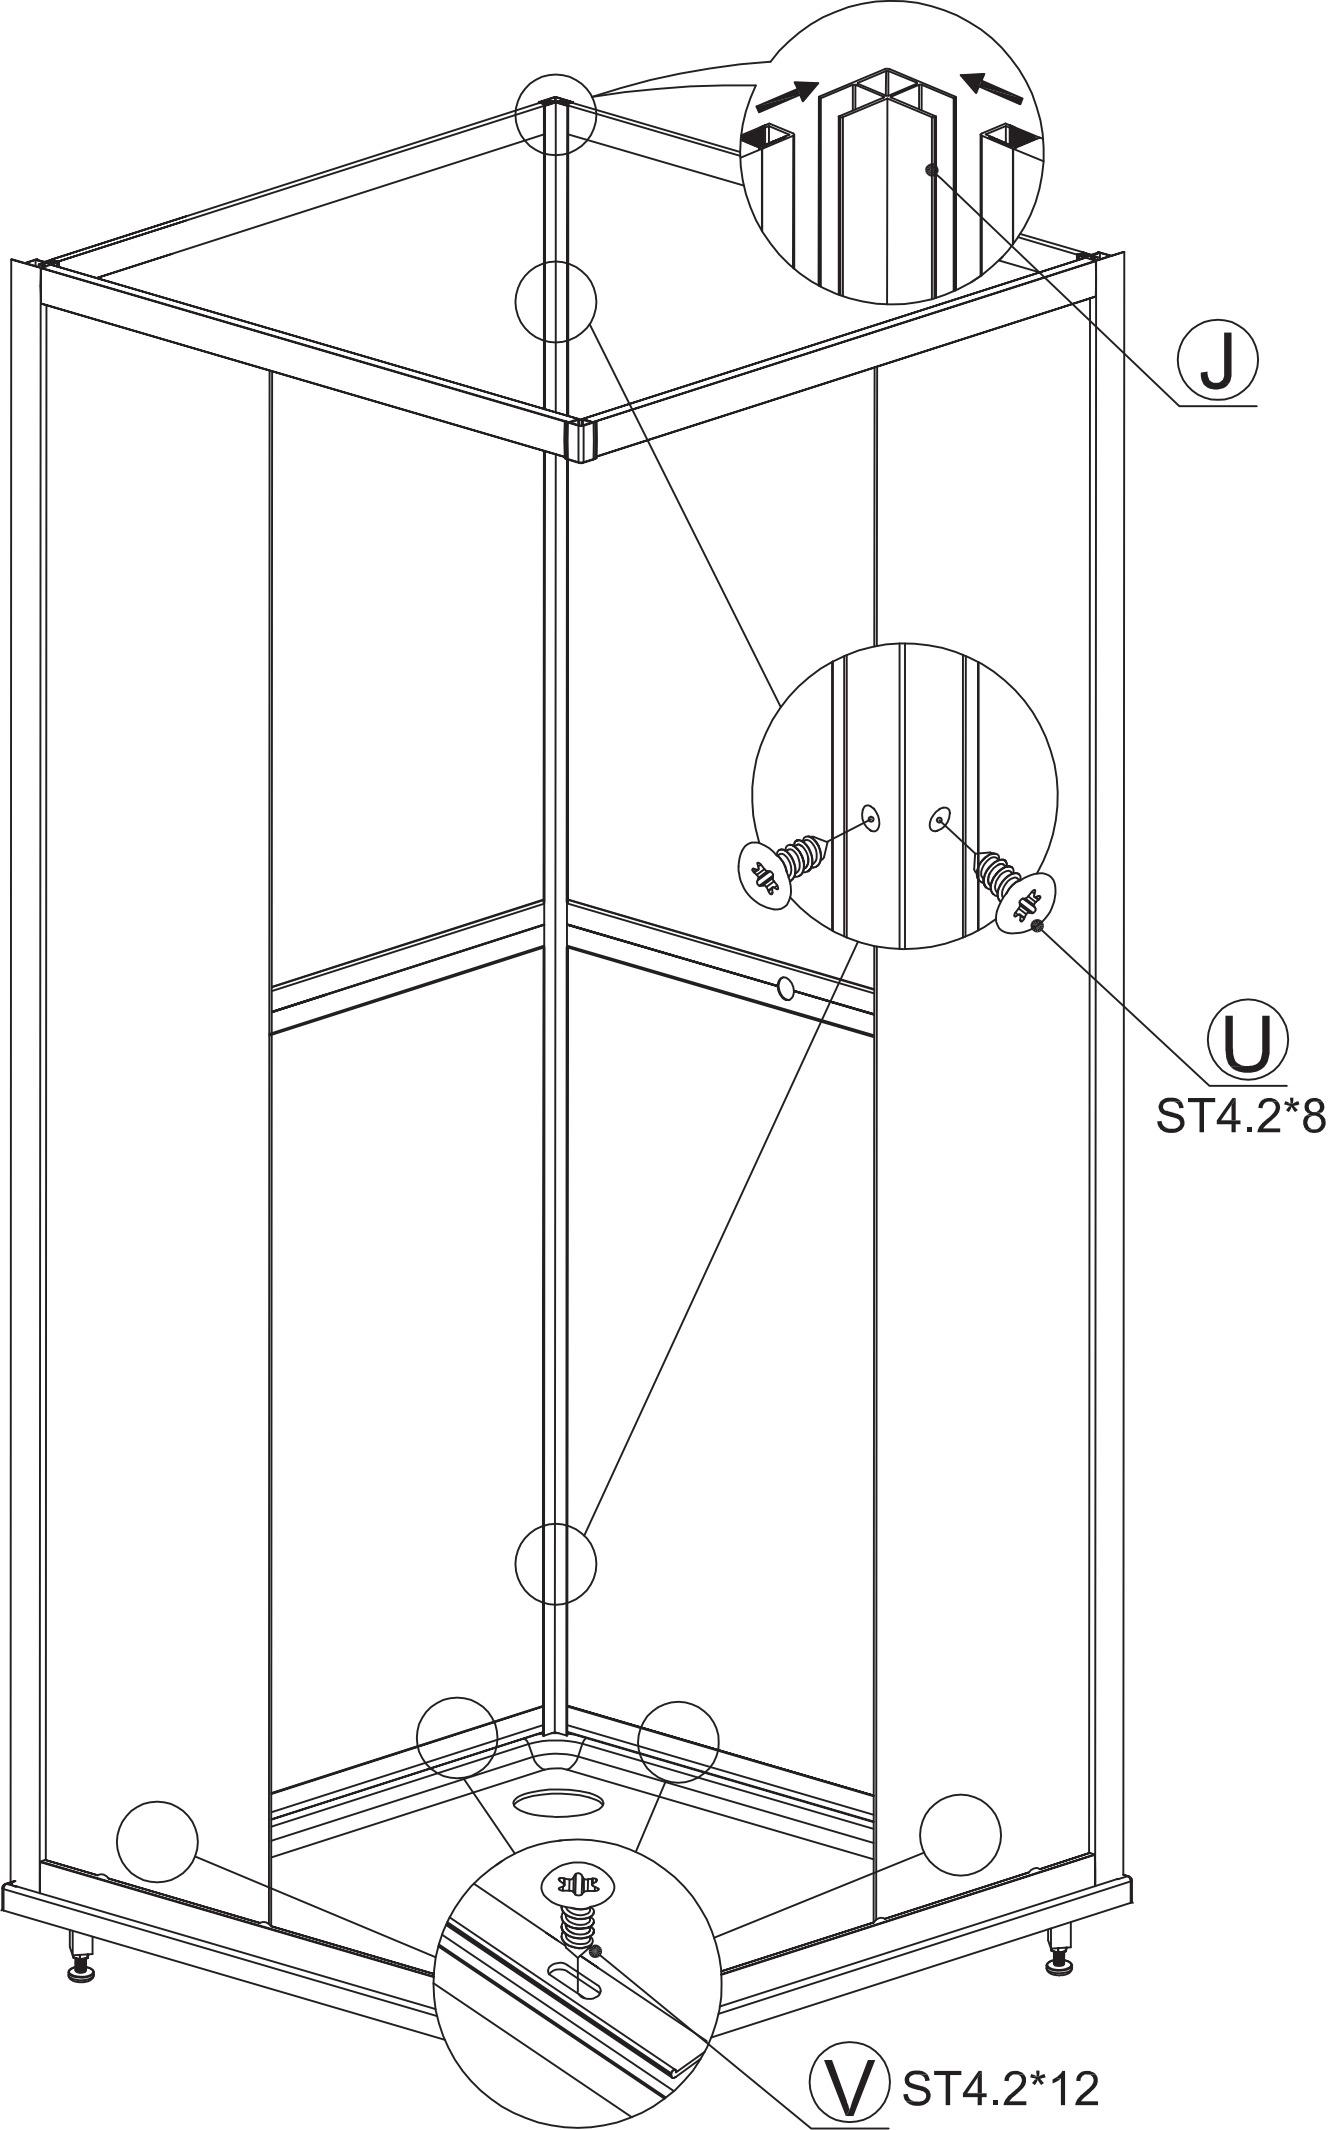

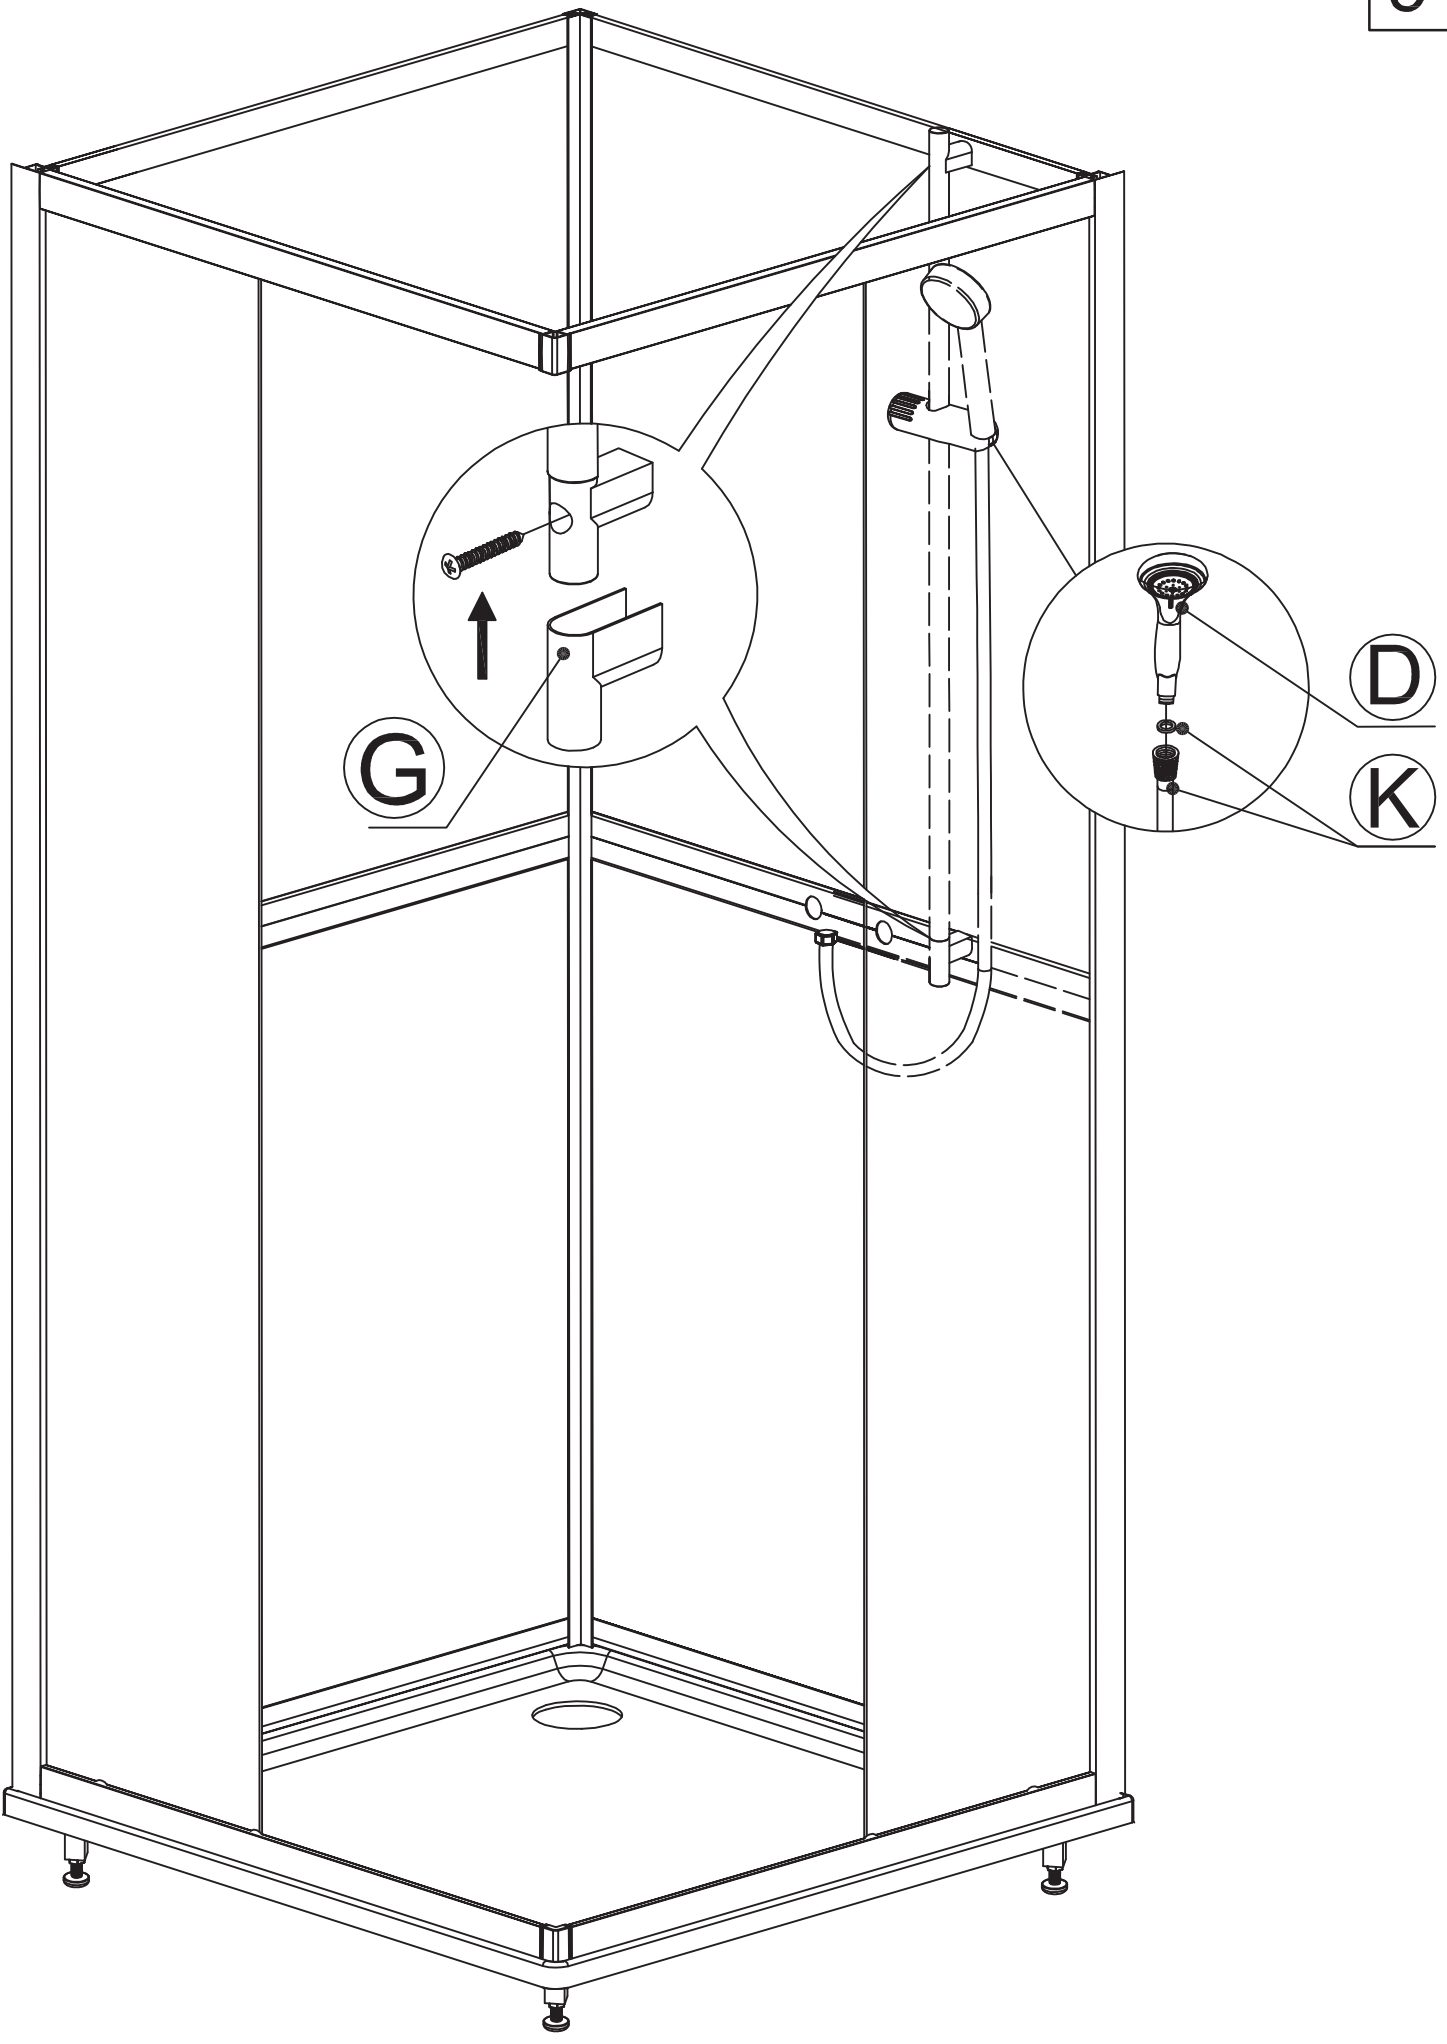

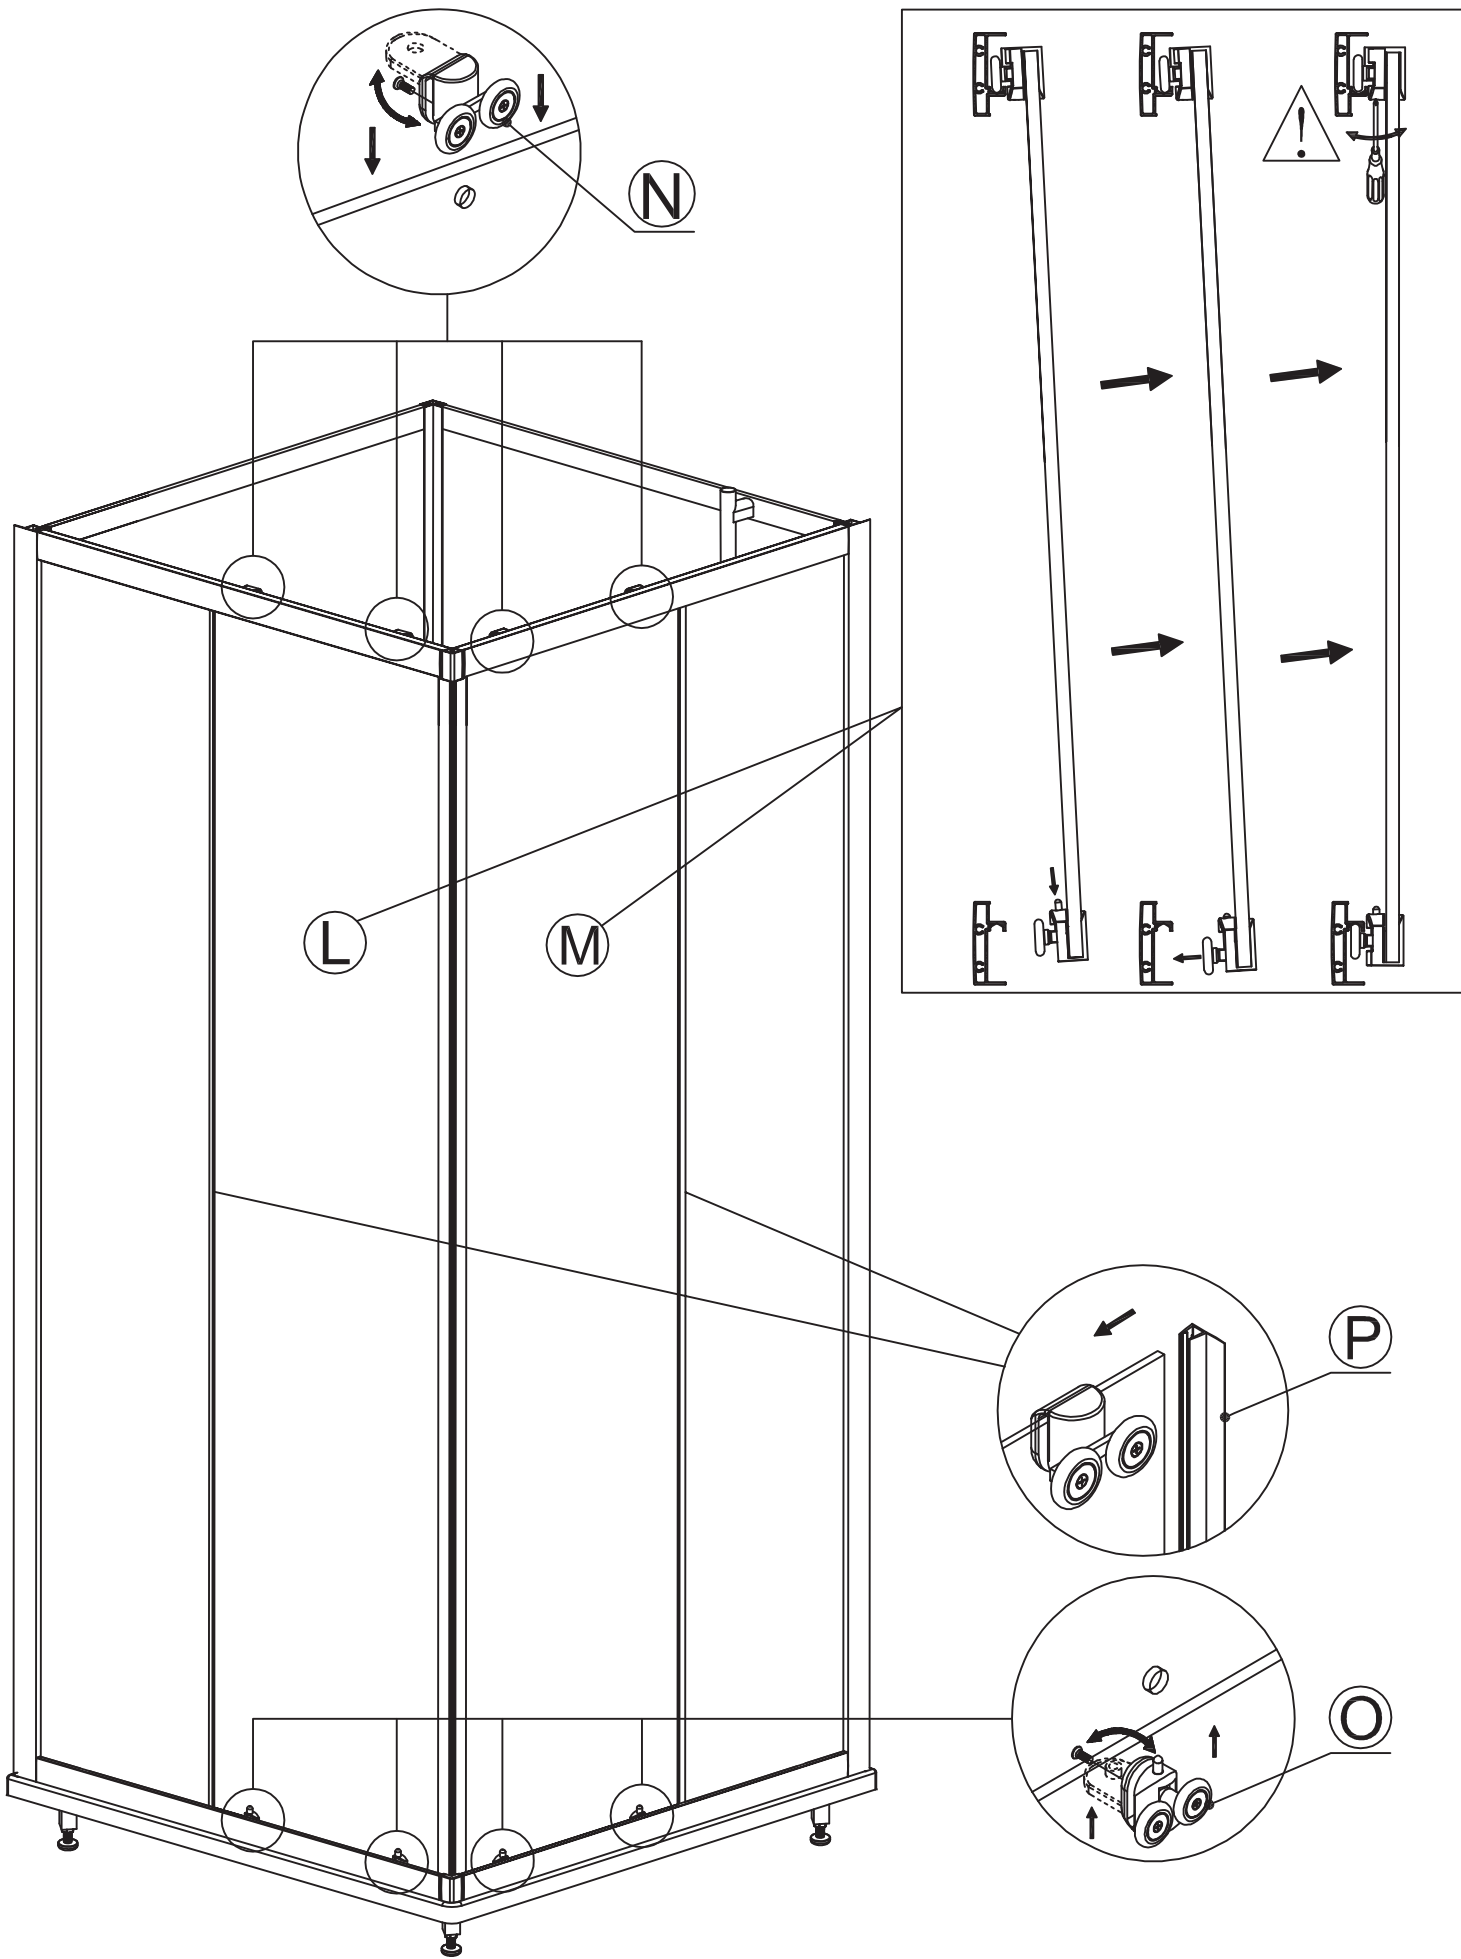

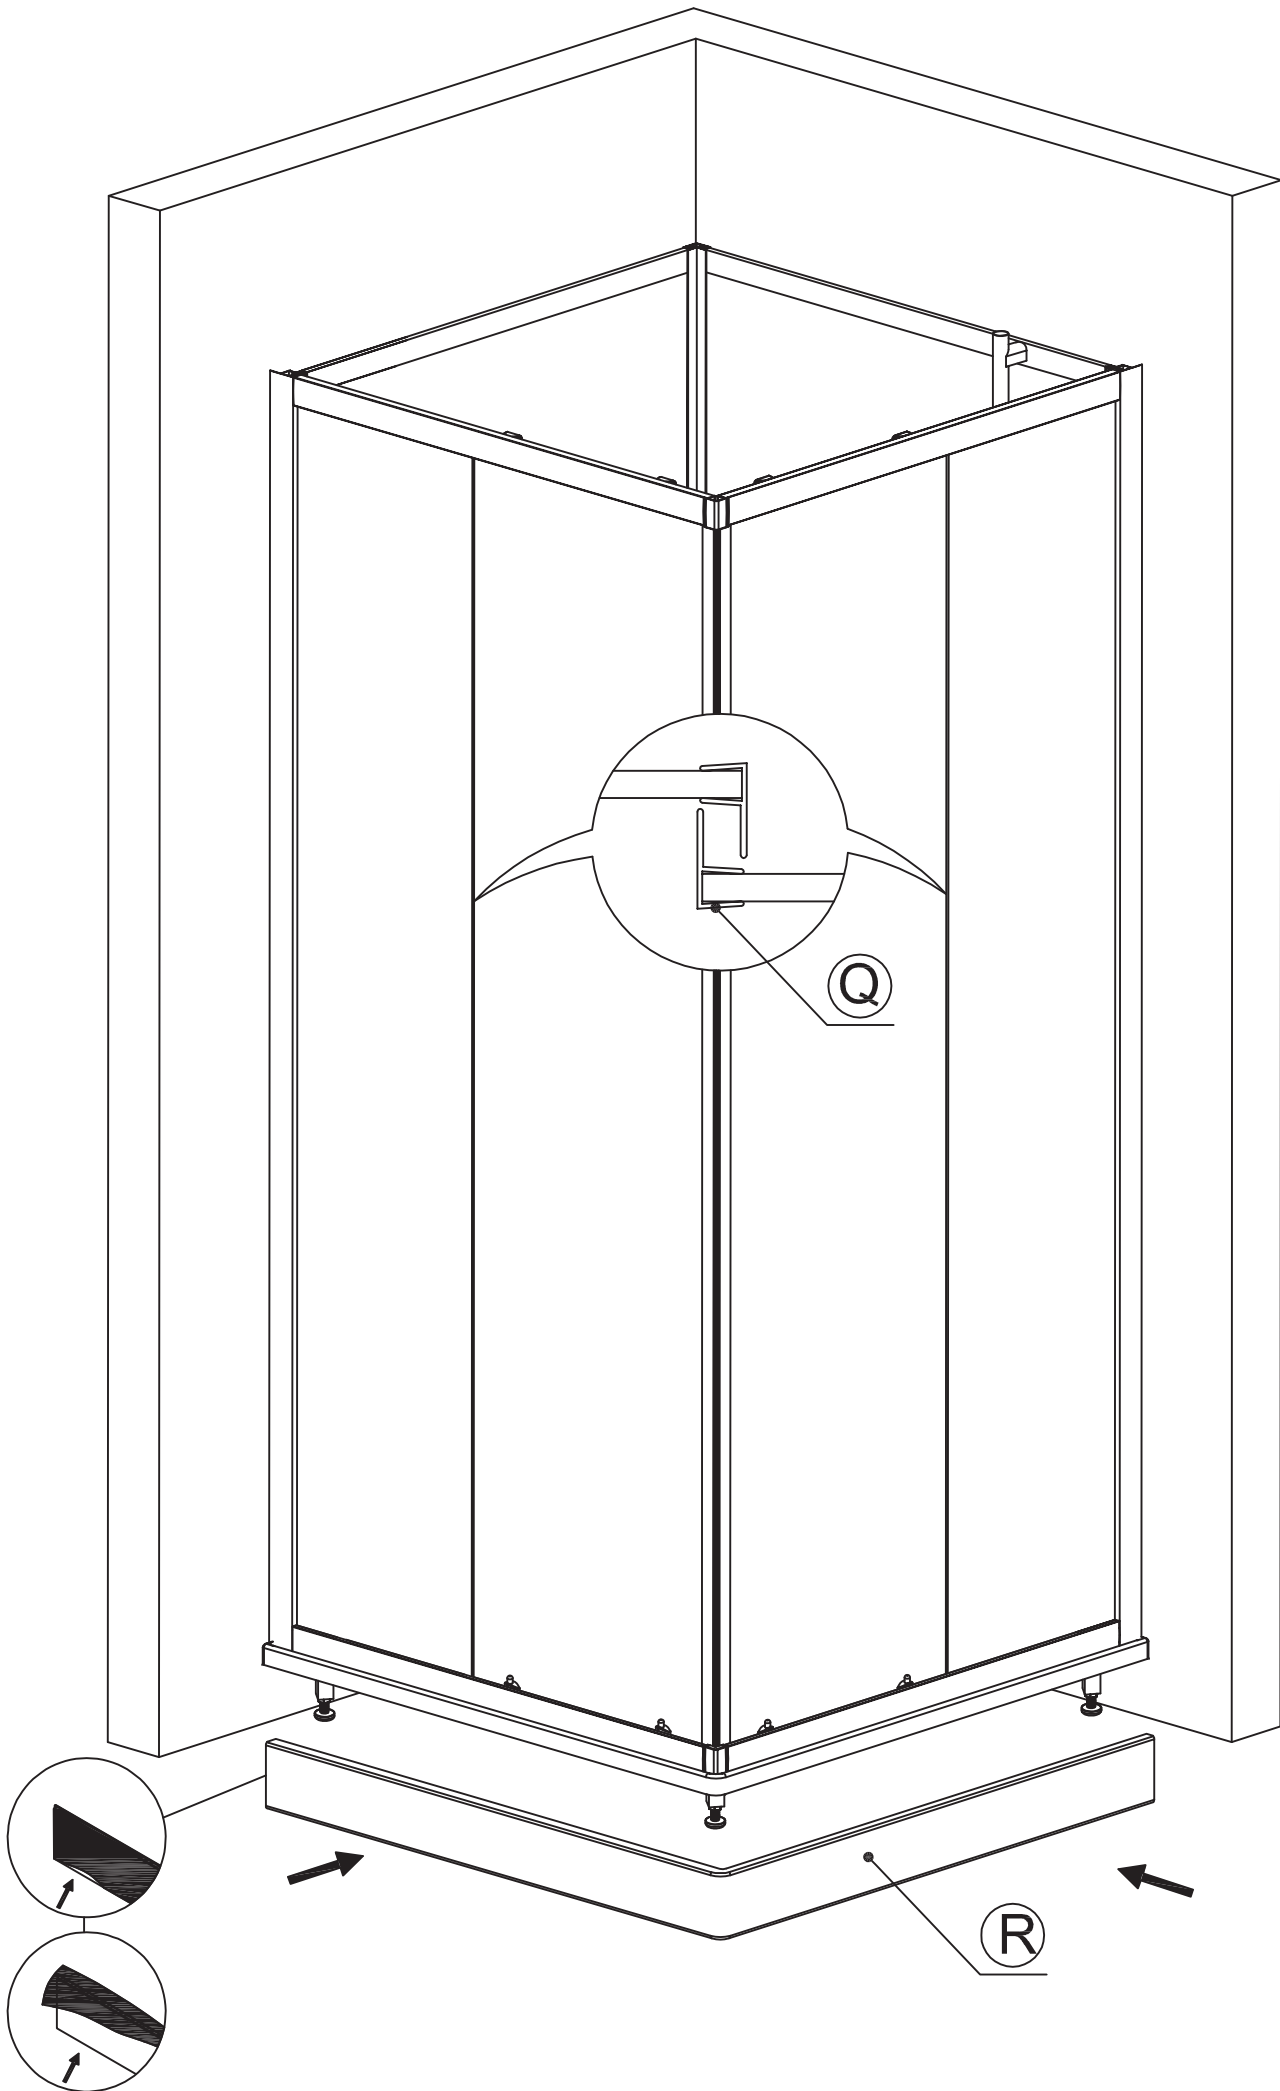

---

duxa bad

Hamnevegen 57 • 5200 OS  
Telefon 51 21 22 10 • Telefaks 52 22 31 70 • ePost [service@duxa.no](mailto:service@duxa.no)